

Dehumidifier

Model A130 Series | Specification Sheet

SPECIFICATIONS				
Model	A130 (ducted)		A130F (movable, with casters)	
Capacity ⁽¹⁾ (water removal)	130 ppd			
Energy factor ⁽¹⁾ (efficiency)	2.8 L/kWh (5.9 pints/kWh)			
Voltage, Phase, Frequency	120VAC, 1 Phase, 60 Hz			
Current draw ⁽¹⁾	8.3 Amps			
Power (Watts) ⁽¹⁾	920 Watts			
Noise	50 dBA			
Dimensions:	Width:	19½"	19½"	
(cabinet only) ⁽²⁾	Height:	18¾"	18¾" cabinet 21" with casters	
	Length:	301/16"	301/16"	
Weight	113 lbs.	· ·	114 lbs.	

Inlet air operating conditions during:

Dehumidification: 50°F–104°F, 40°F dew point min.

Ventilation: 40°F-140°F, 0%-99% RH (non-condensing)

 $^{^{(1)}}$ Rated capacity and energy factor test done and current draw measured in accordance with AHAM DH-1 2008 at 80°F/60% RH inlet air at 0.0 ESP. $^{(2)}$ Height does not include adjustable feet. The width excludes the filter doors and length excludes the duct collars.

FEATURES				
Model	A130 (ducted)	A130F (movable, with casters)		
Control ⁽³⁾	Built-in digital control with display			
Control mounting option	Field interchangeable from top to front	Top only		
Cabinet insulation	½" EPS			
Air discharge orientation	Top or end	End		
Inlet/Outlet duct collars	10" dia.	N/A		
Backdraft damper at outlet	Included	N/A		
Filter	MERV 11 disposable			
Refrigerant	R410A			
Coil type	Corrosion resistant aluminum			
8' Power cord	Plug type			
Discharge air temperature rise	10°F-30°F			
Drain connection	¾" MNPT Threaded			
Warranty	5 Years on all parts including refrigeration system			
(2)				

⁽³⁾Built-in automatic control capable to be set up for dehumidification and ventilation or zoning.

INCLUDED ITEMS			
Drain fitting	¾" MPT x ¾" barbed		
10 ft. Drain tubing	3⁄4" ID		
Duct collars	10" Round (A130 only)		
Manual	Installation instruction		



PRINCIPLE OF OPERATION

The Anden Model A130 Series Dehumidifier is designed to dehumidify the air coming into the unit by passing the incoming air over an evaporator coil to drop the air temperature below the dew point of the air. Moisture is removed from the air and drained out of the unit to a common floor or waste drain. The air is then reheated in the condenser coil and exits the unit.


Dehumidification occurs until the set point is reached, then shuts off until periodic sampling determines a need for operation.

APPLICATION

The Anden Model A130 Series Dehumidifier is the perfect solution for the precise management of humidity required in an indoor growing environment.

CIRCULATION

The Model A130 Series can also be programmed to circulate air within a grow facility. Proper air flow carries moisture away from the plants, helping to prevent fungus, disease and plant pests from damaging the crop. Circulating the air also maximizes the application of ${\rm CO_2}$ in the grow facility.

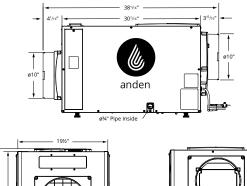



Installation Options for the Anden A130 Dehumidifier Series

Movable • Air is pulled into the dehumidifier directly from the space, dehumidified and returned to the space. Inlet and outlet ducted (Model A130 only) • Ducted with 10" flex duct or hard pipe. • Circulates air to equalize humidity, temperature and move CO₂. Suspended • Air is pulled into the dehumidifier directly from the space, dehumidified and returned to the space. • The dehumidifier is mounted from the ceiling using our hanging kit (Model 5691) to save space in the facility.

Optional Controls and Sensors

Wi-Fi Thermostats



Wi-Fi thermostats and mobile app provide humidity and temperature alerts directly to your smart phone or tablet. Control and monitor climate conditions in your grow room 24/7/365 from anywhere.



Wi-Fi Model 8840

Easy-to-use color touch screen with all control options on the home screen.



Wi-Fi Model 8830

Easy-to-use touch screen with all control options on the home screen.



Wi-Fi Model 8820

Easy-to-use touch screen designed for temperature and humidity control.





Model 8082 Sensor

Monitor temperature and humidity in multiple locations. Readings averaged to balance temperature and humidity.



Model 8083 Sensor

Flush temperature and RH module. Averages four temperature and four RH values.



Model A77

Dedicated monitoring and control of each dehumidifier at canopy height.

MODEL A77 SPECIFICATIONS			
Electrical			
Input voltage and current	Voltage: 35VDC (supplied by dehumidifier control board)		
Output	Communication (RS485)		
Control			
Control range	35%-80% RH		
Accuracy	+/-5% RH		
Differential	3% RH		
Low limit	40°F dew point		
High limit	99°F dry bulb		



